

Nexby Memory Card

- (i) Back up your data and files before formatting the SD card. After formatting, they will be permanently deleted.

First use:

1. Insert the card into the SD card slot
2. In the top bar of the device, click on the notification - "SD card detected"
3. Choose how you want to use the card:
 - Portable storage - choose "Format"
 - Adaptive storage - choose "Another way to format"
4. After formatting, you can move the content or move the content later

Formatting from portable to adaptive storage

1. On the device, open "Settings"
2. Click "Storage" and then "SD card"
3. In the upper right corner click three dots, then "Storage Settings" -> "Format" -> "Format in another way" -> "Format"

Format from adaptive to portable storage

1. Open "Settings"
2. Click "Storage" and then to "SD Card"
3. Click the three dots in the upper right corner, then "Format" -> "Format Card"